

# HOW TO REMOVE RUST WITH PRESSURE WASHING

## STEP ONE: PREP THE AREA



Clear the area of any items that could be damaged, like plants or furniture. Cover shrubs with a tarp if needed, and move loose objects to a safe spot.

## STEP TWO: WEAR PROTECTIVE GEAR



Wearing protective gear like goggles, gloves, boots, and ear protection is essential. Keep pets and children away from the work area for safety.

## STEP THREE: ADJUST THE SETTINGS



Choose the right pressure and nozzle to avoid damaging rusted surfaces. Trained technicians ensure the correct settings are used for each job.

## STEP FOUR: TEST A SMALL AREA



Clean a small test area first to verify the settings. This allows for adjustments before tackling the main job.

## STEP FIVE: REMOVE THE RUST



Once everything is set, the technician removes the rust carefully, ensuring surrounding areas aren't affected and the work zone stays safe.

## STEP SIX: APPLY SEALANT (OPTIONAL)



After rust removal, a sealant can be applied to prevent further damage. This is optional, as some may prefer to paint or replace materials.